

Shot Navi® VELLIX v14 / v12

Quick Start Guide (Golf Navigation)

Thank you for purchasing Shot Navi VELLIX. This product features AMOLED display, offering excellent visibility and vivid image quality from any viewing angle. It is also equipped with a touchscreen panel, allowing for smooth and intuitive operation during play. We hope you enjoy using your Shot Navi VELLIX and that it assists you in improving your score and enhancing your play speed.

This guide provides an overview of the main functions commonly used on a golf course. For precautions on use, warranty terms, detailed product descriptions, and functions or settings not covered in this guide, please refer to the user manual available on our website.

User Manual

<https://shotnavi.jp/snp/vellix/manual.php>



Product Information

<https://shotnavi.jp/snp/vellix/>



V.2607

○ Short Press ○ Long Press Tap: Touch the screen Swipe: Vertical and horizontal scroll the screen

① How to start navigation

* Please perform GPS reception near the teeing ground of the starting hole.

① Power On



Long press the upper button. After the startup logo is displayed, it automatically switches to the watch screen.

② Display Menu



Short press the upper button or swipe left on the watch screen to display the main menu.

③ Start GPS



Tap .

④ Select Competition Mode



* Selecting "Yes" hides height differences and other information.

⑤ Automatic Golf Course Search



For courses with two-green, you can select the green type (e.g., Bent, Korai).



Watch Mode Operation




- Menu
- Power ON/OFF
- Back
- Start Golf Navigation

Navigation Mode Operation



- Display Text in a Larger Size
- Location Registration
- Menu



Navigation Screen

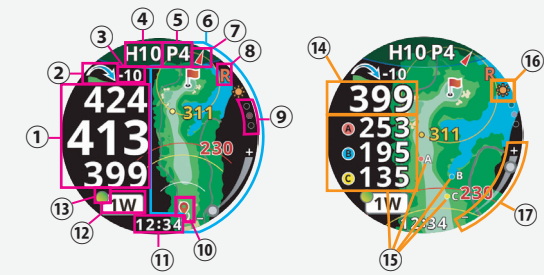

- ① Distance to Green Center, Front Edge, and Back Edge
- ② Height difference icon
- ③ Height difference
- ④ Hole number
- ⑤ Par number
- ⑥ Current hole layout
- ⑦ Direction of the green from your current location (Hide when compass calibration is required)
- ⑧ Displays left or right green when there are two-green
- ⑨ Current view and hazard position
 - 1st: Green view
 - 2nd: Simple view
 - 3rd and after: Location of hazards displayed in hazard view
- ⑩ Current position
- ⑪ Current time
- ⑫ Recommended club
- ⑬ Connected to Shot Tracker (Unconnected: Red)
- ⑭ Distance to the front edge of the green
- ⑮ Distance to the hazard and the location
- ⑯ Weather Information (3DX connection only)
- ⑰ Zoom In/Out

② Navigation Menu

You can view menus related to navigation, such as play interruption or hole changes, and configure display options.

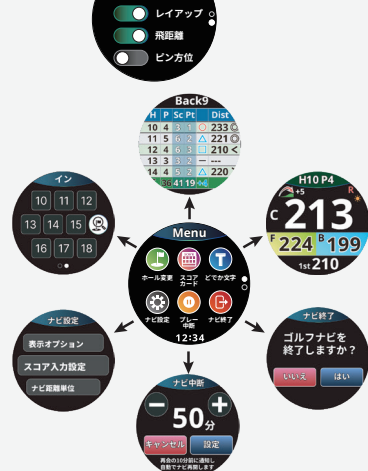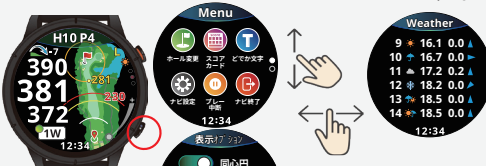

③ Auto View Change/Auto Measure Function

Auto View Change

The navigation screen automatically switches between the Hazard, Simple, and Green Views depending on the remaining distance to the green.

① Hazard View



Distance to the front edge and various hazards on the course.

② Simple View



Distances to the center, front edge, and back edge of the green.

③ Green View




Distance to the center and front edge and undulation, shape, width, and depth of the green.

Auto Measure (Automatic Distance Measurement)

The device automatically detects your swing and registers the location.


* If the distance between shots is too close, it is not automatically detected. Please register the location manually.

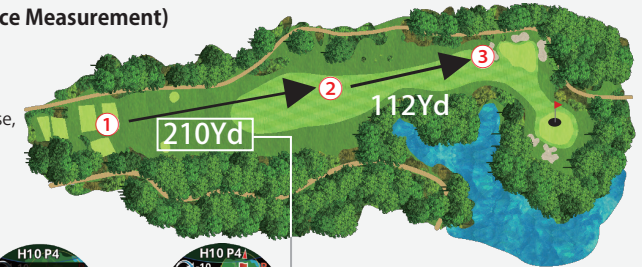

Tap the recommended club




When detected automatically, the club selection is displayed.

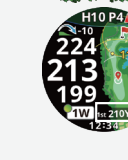

④ Green Eye & Slope Direction Function

Green View displays the undulations of the green in color. In addition, Slope direction displays the direction of the slope with an arrow.

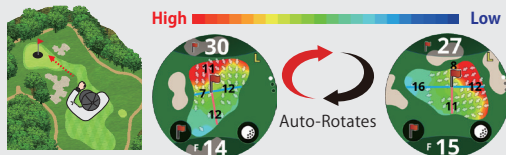

display automatically rotates to match the green shape from the current position, and shows the width, depth, and distances to the front edge and center.[

* Green Eye is not available in competition mode or for golf courses outside of Japan.

⑤ Three-Point Distance Measurement



While in simple or hazard view, double-tap anywhere on the layout, it displays the distance from your current location to the tapped point (red line) and from that point to the green center (yellow line).

⑨ Display Text in a Larger Size



Select "Large Text" from navigation menu or short press the upper button.



(Short press the upper button to return to navigation screen.)

⑩ Two-Green Manual Switching





You can manually switch between the left (L) and right (R) greens by tapping the icons on the navigation screen.

* If the green is selected at startup, it cannot be changed by tapping the screen. Please change it from the navigation menu.

⑥ Fairway Navigation Function


Fairway Navigation function displays the distance from your current location to the center of the targeted fairway, as well as the distance from that point to the green.

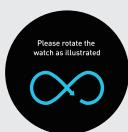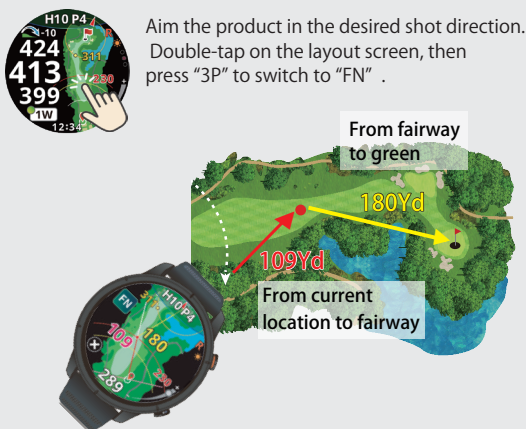


A message is displayed when compass calibration is required. Rotate the device several times in a figure-eight motion to complete the calibration.

⑪ Scorecard

You can enter the score (strokes, putts).

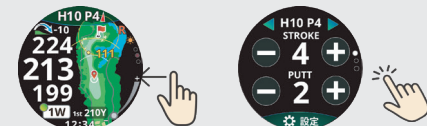

Swipe left on the navigation screen.

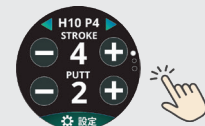


Select the hole you want to enter using the ◀ ▶ icons. Use the + or - icons to adjust the score and putt count.



Swipe left to view the entered score.

Swipe right to return to the navigation screen.

⑫ GPS Reception

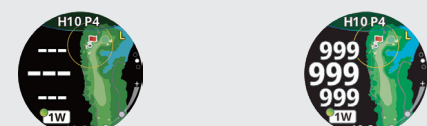


If "----" appears on the navigation screen, GPS signal is not received. Move to an open area to receive the GPS signal.



If the remaining distance is clearly incorrect, such as 999, please check whether the correct course and hole are selected.


⑦ Height Difference

Switches between horizontal distance and slope-adjusted distance.

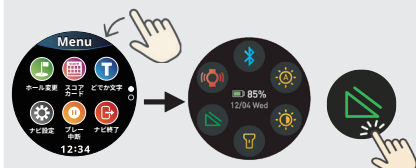


Swipe down from the top of the main menu screen.

This mode can be turned on or off (factory default: ON).

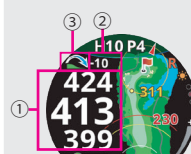

- ① Horizontal distance to green (in white text)
- ② Height difference from current location to green center
- ③ Height difference icon to green

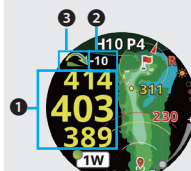

- ① Slope-Adjusted Distance to green (in yellow text)
- ② Height Difference from current location to green center
- ③ Height difference icon to green



⑬ Charging

Connect the magnetic charging/communication cable to the terminals on the back of the main unit.



Connect the USB terminal of the charger to a PC or USB AC adapter to begin charging.

* The USB connection area is waterproof; however, do not charge the device while it is wet. Ensure that the terminals are completely dry before charging. Charging while wet may cause heat generation or a short circuit.


⑭ Exit Navigation/Power OFF



Return to the watch face. Long press the upper button to turn the power off.

⑧ Display Options

During a round, you can toggle the display of distance circles on or off.

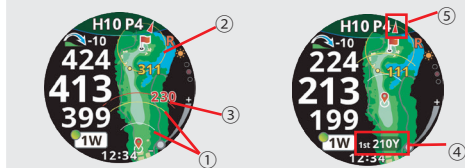

① Concentric Circles: Displays 100-yard (white), 200-yard (yellow), and 300-yard (white) concentric circles from your current location.

② Layup Circle: Displays an orange circle indicating your layup distance centered on the green. Default setting is 100 yards. (The distance can be changed in the navigation settings under Layup Distance.)

③ Shot distance: Displays shot distance

④ Pin Direction (Green Direction): Display the direction to the green with an arrow from your current location.

⑤ Driver Distance Circle: Displays a red circle representing your registered driver distance from your current location. Default setting is 230 yards. (The distance can be changed in the navigation settings under Driver Distance.)

⑮ Reset

If the GPS is not working, the screen freezes, or the device does not power on, it may be frozen. To reset and reboot the device.



Long press the upper button simultaneously for 8 seconds.

⑯ Product Specifications

	V14	V12
Dimensions (excluding belt)	Φ48 × 12.5mm	Φ42 × 12.5mm
Weight (excluding belt)	28g	24g
Display	1.43inch AMOLED	1.2inch AMOLED
Continuous Usage Time	Up to approximately 15 hour	Up to approximately 12 hours
Full Charging Time	Approximately 2 hours	
How to Charge	Magnetic Charging/Communication USB Cable[	
Battery	Lithium polymer battery	
Water Resistance	IPX7 (Water-resistant to a level of daily use)	
Data Update Method	Data update via USB storage mode	
Included Accessories	watch case, Magnetic Charging/Communication USB Cable, Quick Start Guide/Warranty	

* Battery life varies depending on usage patterns and duration